

RANGE	EXTENSION ROD	RANGE	EXTENSION ROD
0 — ½"	D (Dial Indicator)	5" — 5½"	D + 5"
½" — 1"	D + ½" + Ball Anvil	5½" — 6"	D + ½" + 5"
1" — 1½"	D + 1"	6" — 6½"	D + 1" + 5"
1½" — 2"	D + ½" + 1"	6½" — 7"	D + ½" + 1" + 5"
2" — 2½"	D + 2"	7" — 7½"	D + 2" + 5"
2½" — 3"	D + ½" + 2"	7½" — 8"	D + ½" + 2" + 5"
3" — 3½"	D + 3"	8" — 8½"	D + 3" + 5"
3½" — 4"	D + ½" + 3"	8½" — 9"	D + ½" + 3" + 5"
4" — 4½"	D + 4"	9" — 9½"	D + 4" + 5"
4½" — 5"	D + ½" + 4"	9½" — 10"	D + ½" + 4" + 5"