


## Relamping Instructions

MR-16 Halogen Lamp

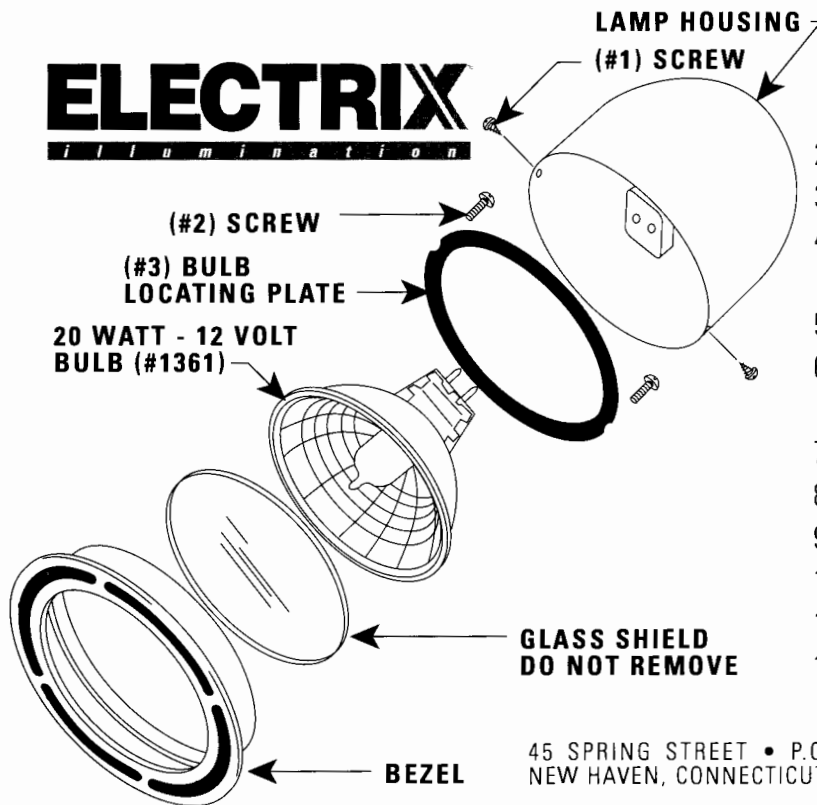

1. Turn off or unplug light fixture.
2. Remove 2 screws (#1) from front edge of lamp housing.
3. Pull lamp bezel assembly out of the housing.
4. Remove bulb from socket by holding socket and pulling bulb until pins disengage.
5. Remove two screws (#2) from bezel.
6. Install new bulb in bezel assembly.  
**Make sure to leave glass shield in place.**
7. Replace bulb locating plate (#3) and secure with screws.
8. Push pins on rear of bulb into socket.
9. Line up two holes on edge of bezel with lamp housing.
10. Push lamp bezel into housing - keep holes lined up.
11. Install two screws into holes in front edge of housing.
12. Plug in lamp.

45 SPRING STREET • P.O. BOX 9575  
NEW HAVEN, CONNECTICUT 06535-0575

7-1-08

P/N 960



**SAVE THESE IMPORTANT SAFETY INSTRUCTIONS**

**WARNING: To reduce risk of Fire, Electric shock, or Injury:**

1. **Disconnect and allow to cool at least 5 minutes before replacing bulb.**
2. **Bulb gets HOT quickly! Be sure the power is off when re-lamping.**
3. **Do not touch the hot lens, guard or enclosure.**
4. **Do not direct light at persons.**
5. **Do not look directly at lighted bulb.**
6. **Keep lamp away from curtains, draperies and similar materials.**
7. **Use only with a 12 Volt 20 Watt or smaller bulb. (ELECTRIX Part # 1361)**
8. **Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage bulb.**
9. **Do not operate the lamp with a missing or damaged shield.**
10. **Damaged guards or shields should be replaced before the lamp is used.**
11. **CAUTION: To reduce the risk of fire, use 12V, 20W, Type MR-16 halogen lamp max.**

45 SPRING STREET • P.O. BOX 9575  
NEW HAVEN, CONNECTICUT 06535-0575

**P/N 960**